

## CLEANING AND MAINTENANCE

Turn off freezer, remove foods and drip tray. Wash interior liner with a solution of warm water and two tablespoons baking soda per quart water. Rinse and wipe clean. Do not use soaps, detergents, scouring powder, spray cleaners, or the like for the liner. They may create odors in the freezer.

Wash the drip tray in a mild detergent solution and dry with a soft cloth. Use only mild soapy water to clean door gaskets.

Never use acids, chemical thinner, gasoline, benzine, or the like for cleaning any part of the freezer. Boiling water and benzine may deform and damage plastic parts.

Wash the exterior cabinet with a detergent or soap solution. Rinse well. Do not use scouring powder or pads. To protect the cabinet finish, use a good quality automotive type wax. Be careful not to wax plastic parts.

## BEFORE CALLING FOR SERVICE

### MY FREEZER IS TOO WARM

- Adjust Cold Control. See page 3.
- Make sure door is closed properly.

### MOISTURE COLLECTS ON THE OUTSIDE

- Frequent door openings in highly humid conditions will cause this. Reduce door openings and reduce time door is open.
- Make sure door seal is tight.

### MY FREEZER IS NOISY

- Make sure cabinet is level, not touching a wall or other surface, and rests squarely on the floor on all four corners.
- Normal noises include refrigerant gurgling as it passes through tubes and the compressor clicking on and off.

### THERE IS AN ODOR IN MY FREEZER

- Check for spoiled foods. Clean interior. See page 4, upper part.

INSTRUCTION  
MANUAL

**SANYO**

**HF-5017**



**FREEZER**

## ATTENTION

For your protection in the event of theft or loss of freezer, fill in spaces provided below. Model and Serial Numbers are indicated on rear wall of freezer.


MODEL No. \_\_\_\_\_

SERIAL No. \_\_\_\_\_

**SANYO**

SANYO  
2605 Plummer Street  
Chatsworth, CA 91311, U.S.A.

## FEATURES GUIDE

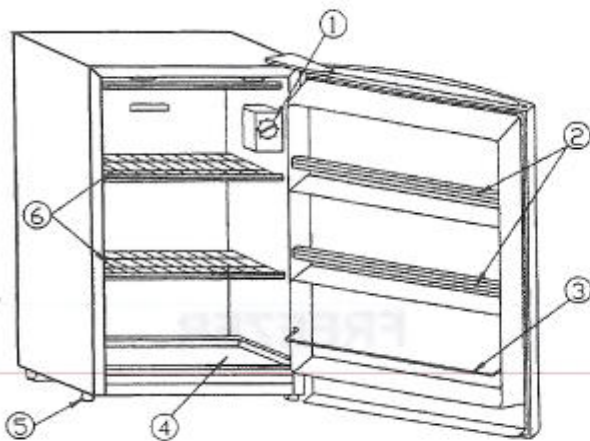

1. Temperature control.
2. Door racks: provide extra space for storage.
3. Panel bar:
4. Drip tray: catches melted water when defrosting. Use as a meat tray except during defrost.
5. Adjustable legs: keeps freezer level.
6. Evaporator form shelves: storage and provides even freezing temperature throughout.

2

## INSTALLATION INSTRUCTIONS

To use your freezer with the most efficiency and safety, select a suitable place for installation keeping in mind the following points:

1. The freezer should be installed on a strong, level floor. If floor is not quite level, adjust feet as necessary.
2. This freezer is designed for free standing installation only and should not be recessed or built-in.
3. Allow four inches of air space behind the freezer.
4. Keep away from direct sunlight, oven, or other heat source.
5. The freezer is equipped with a three-prong plug and is grounded to eliminate electrical hazards. It should be plugged into a grounded electrical outlet.
6. Do not use an extension cord.

## TEMPERATURE CONTROL

The freezer temperature can be adjusted by the Cold Control Knob. Freezer temperature will become lower as the control knob is set closer to the "MAX" position.

Freezer temperature will vary depending on the quantity of food stored and on the frequency with which the door is opened.

Ice cream can be used as an indicator of freezer temperature. If it is too hard or too soft, adjust Cold Control accordingly.

## HOW TO DEFROST

Remove frozen foods from freezer. Keep drip tray in place. Set Cold Control Knob to "OFF" position.

Defrosting may take up to several hours. To defrost faster:

- Leave door open.
- Place pans of hot water on frost shelves.
- Wipe with warm towel or sponge.



**NEVER USE A KNIFE OR OTHER METAL OBJECT TO REMOVE FROST AND/OR ICE DOING SO MAY SEVERELY DAMAGE THE REFRIGERATION SYSTEM.**

When defrosting is complete, remove drip tray and dispose of water. Set Cold Control back to original position.

3