



Level 1-3 4in(10cm) Open Apparatus - Wood Omni

Materials for 1 Lane

4 Omni Stands



- 1 – 2x4 x 8”
- 20 - Magnets - [Amazon FINDMAG 10 Pack 110lb Neodymium Magnets](#)
- 20 - #6x1” screws - [HomeDepot #6x1" Screws](#) [Lowes #6x1" Screws](#) [Amazon #6x1" Screws](#)
- 1 - 1/16 Wood Drill Bit - [HomeDepot 1/16 Drill Bit](#) [Lowes 1/16 Drill Bit](#) [Amazon 1/16 Drill Bit](#)
- 20 - Fender Washers - [HomeDepot 3/16 Fender Washer](#) [Lowes 3/16 Fender Washer](#) [Amazon 3/16 Fender Washer](#)
- 10 - Black Qt buckets - [Uline Black Qt Bucket](#)
- 10 - White Qt buckets - [Uline White Qt Buckets](#)
- 1 - Landing Pad - [Amazon SYMIK LP690 27-inch Landing Pad](#)
- 1 - 100' Tape Measure - [Amazon Craftsman 100' Measuring Tape](#)
- 10 sheets of 3.5” stickers - [Online Labels](#)
- Sticker File - [Level 1-3 4in\(10cm\) Open Lane '24-01](#)

Build Instructions

Cut 8 - 2x4x12in(4x8x30cm) cut at 45 degrees long point to long point and notched halfway - 1.75in(4cm) to interlock, a 2.5in(6cm) screw can be used to secure through bottom

Drill pilot holes at center point on top and 2” down from the top on the angles

Attach magnets with the #6 screws

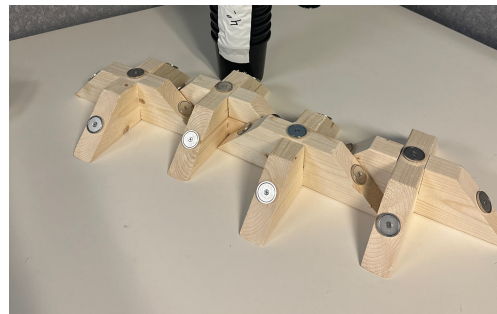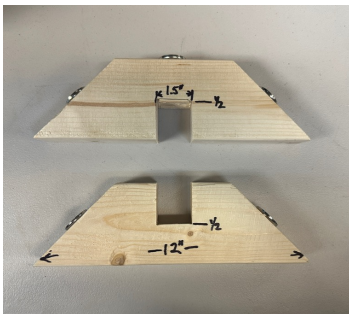



Level 1-3 4in(10cm) Open Apparatus - Wood Omni

Attach Fender Washer to Bucket

Center the fender washer on the back of sticker and place centered into the bottom of the bucket

